

Bootloader Update VIASS Pro2


1. Download the **last version of VIESW2** Software from www.viass.at
https://www.vi-shooting.com/1/soft/VIESW2_last.zip

and

the **last Bootloader Version**


https://www.vi-shooting.com/1/soft/Bootloader_last.zip

2. Extract the Zip file to c:\viesw2
3. Install driver (only for the first installation)
Go to the folder C:\VIESW2\driver
and start the driver installation: **CDM21228_Setup.exe**
4. Connect the VIASS Pro2 to the USB Port
5. Start the configuration Tool VIESW2

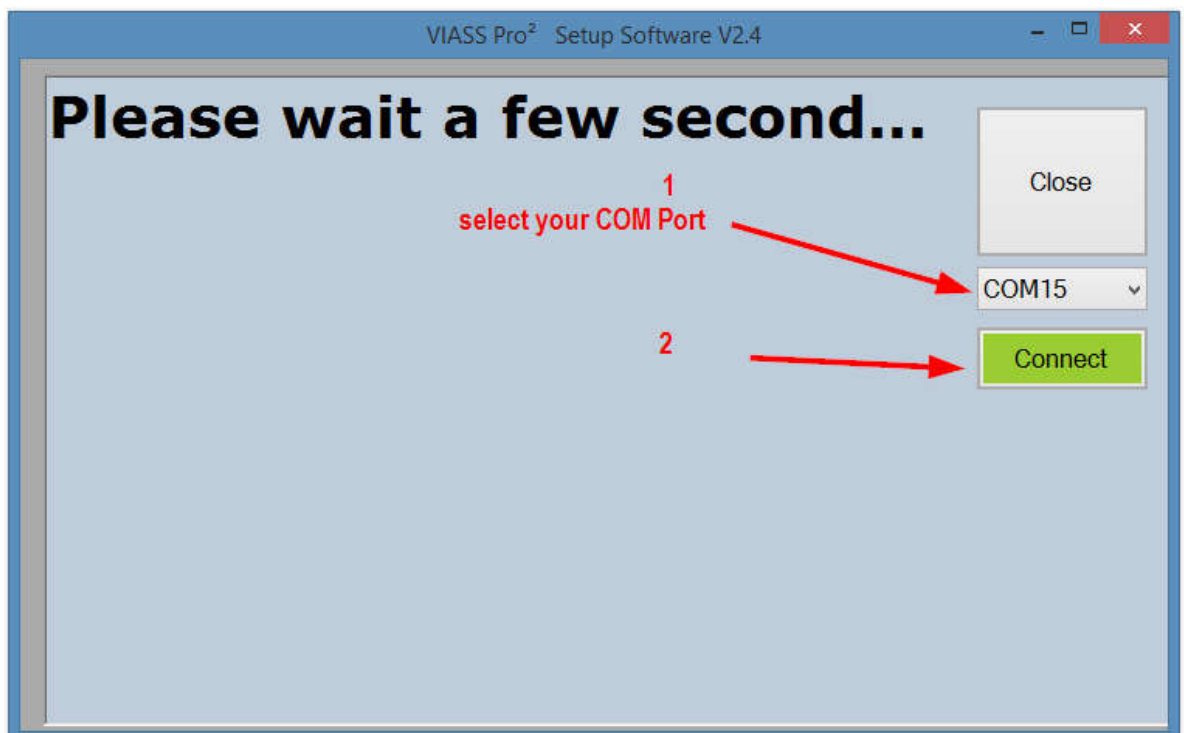


select your COM Port from the device, and click Connect

6. First you must delete the **old** Firmware

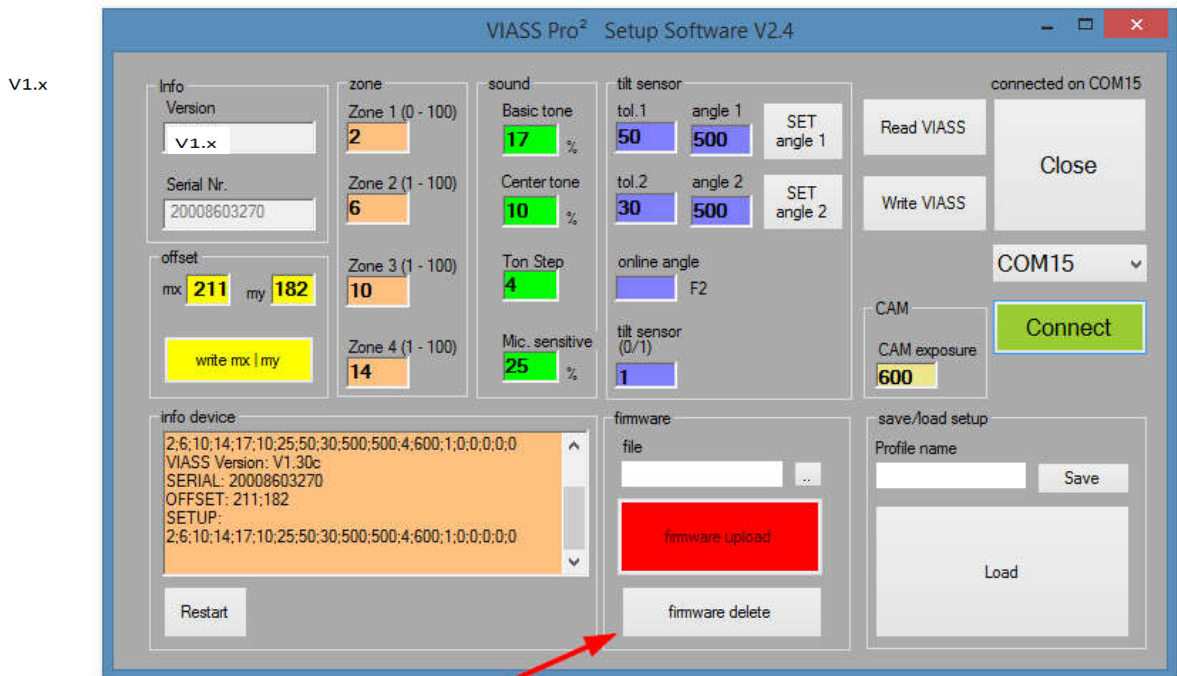

1: delete the old Firmware

The Firmware is **now** deleted

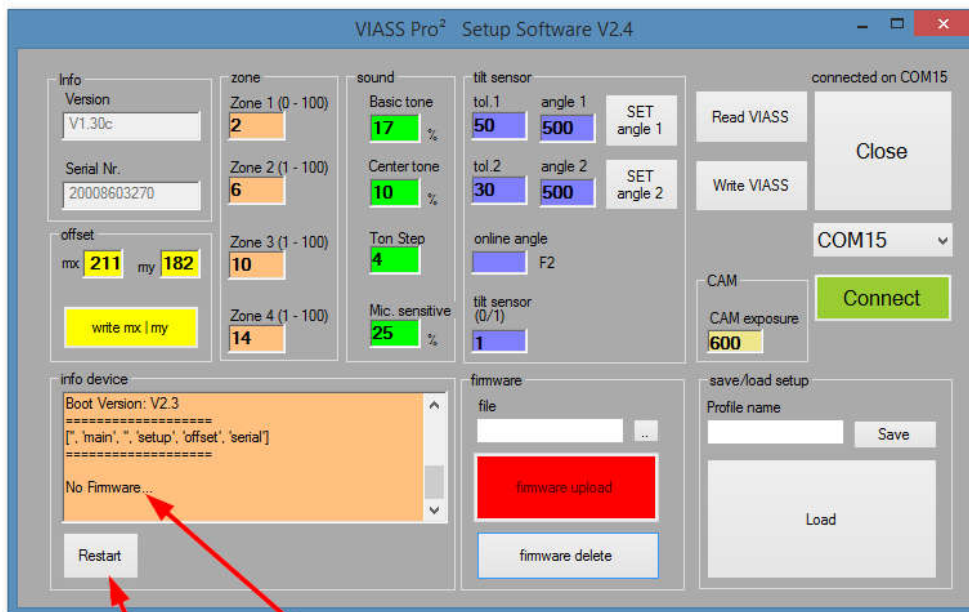


Reset

you can see NO Firmware

If you not see this Window, press Reset Button and wait.

You can see the Info „No Firmware“ and the **Boot Version: V2.x**

7. Update the last **Bootloader file** and the last **Firmware file**

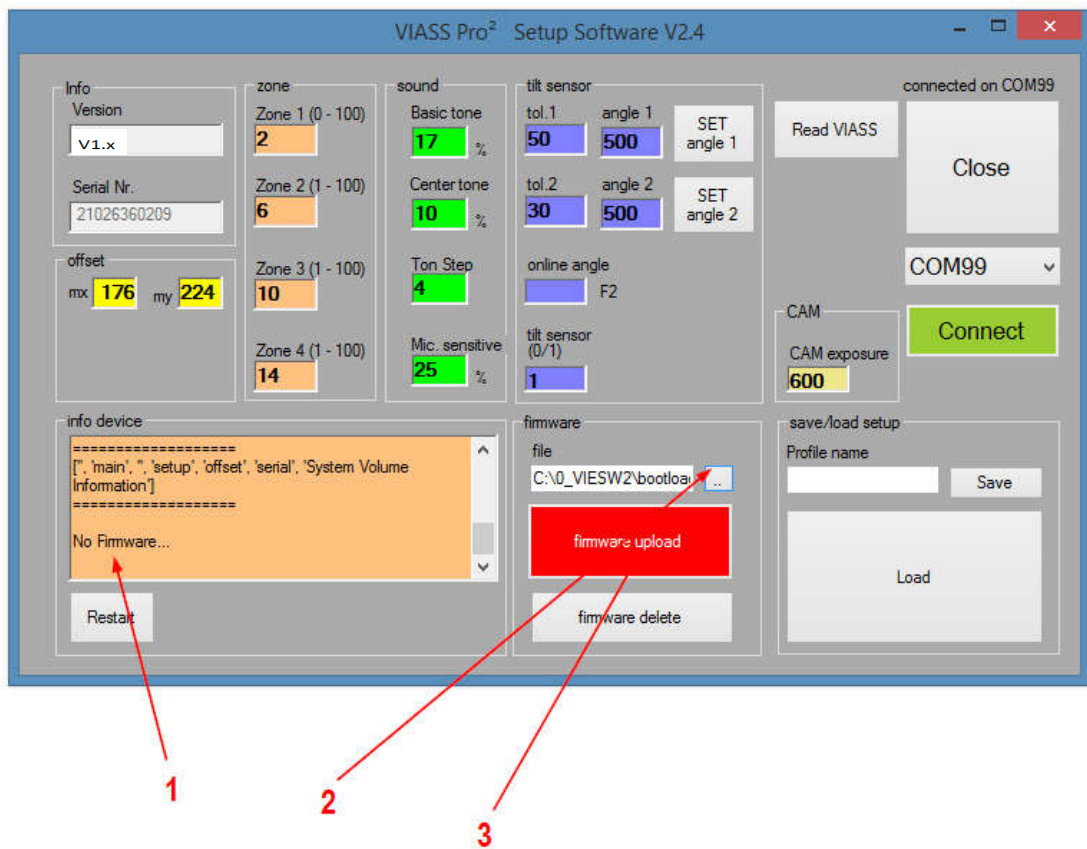


1. You can see the Text „No Firmware“ or the „Info device“ window are clean
2. Select the last **Bootloader file**
3. Press Firmware Update and wait, all LED on the VIASS must be off
After this, press **Reset** button, and see the new Bootloader Version.

Now we must upload the last Firmware

1. You can see the Text „No Firmware“ or the Info device window are clean
2. Select the last **Firmware file**
3. Press Firmware Update and wait

Now the VIASS is starting with the new **Bootloader** and the new **Firmware**.

8. Please Check the new Versions

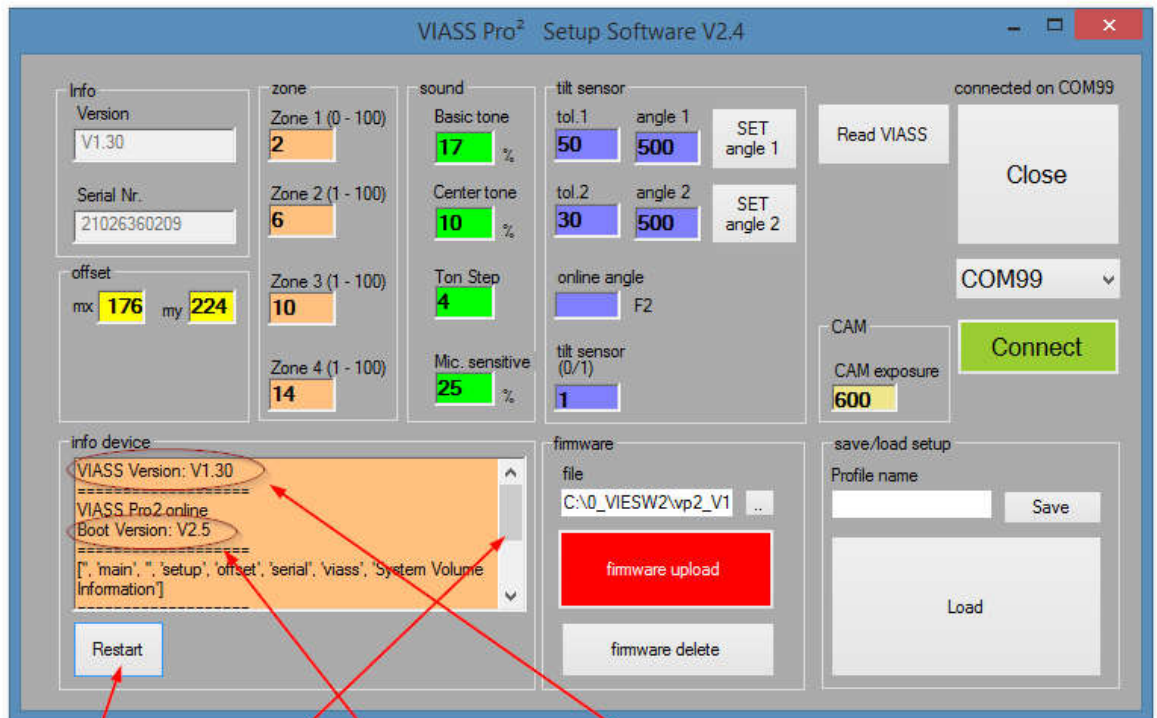

Reset

scroll up

Bootloader Version

Firmware Version

First, please press the Reset button again,
 you can see now the new Bootloader and new Firmware Versions.
 You must scroll up in the „info device“ window to see that

Now all is finish and you can disconnect the VIASS from the PC

If you have problems, please contact us: office@viass.at